


Hydra Research

Update Firmware

Updating the firmware on your Hydra Research 3D printer.

Written By: John Kray

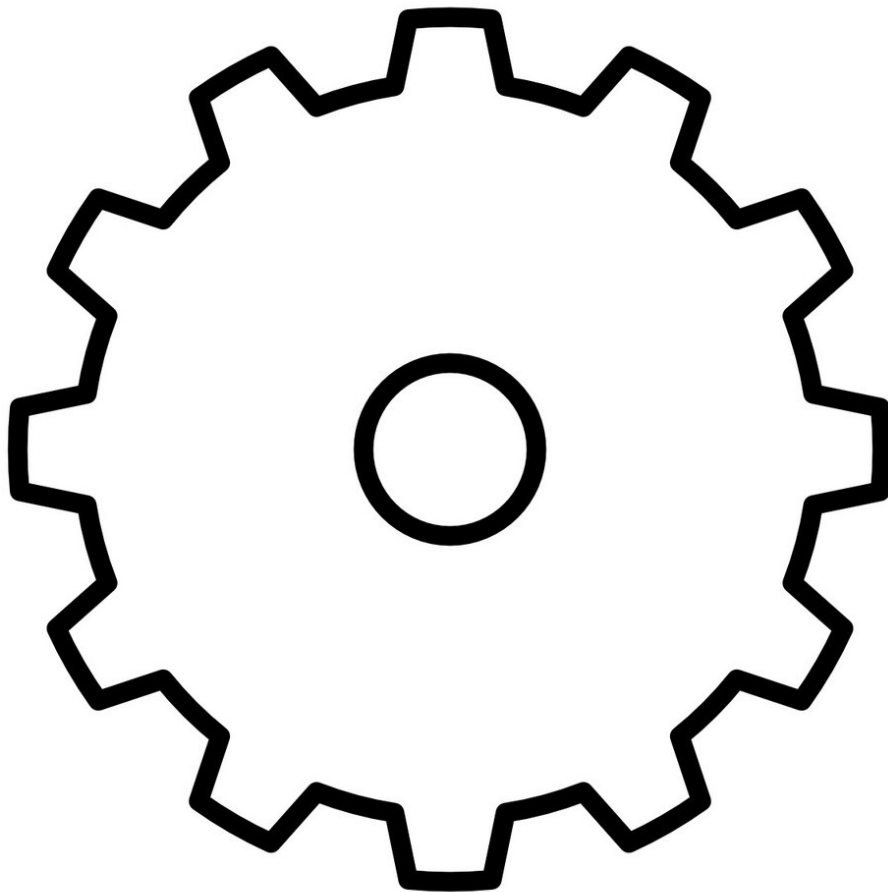



INTRODUCTION

Updating the firmware on your Hydra Research 3D printer.

-

[*Nautilus printers use these instructions*](#)


Step 1 — Download

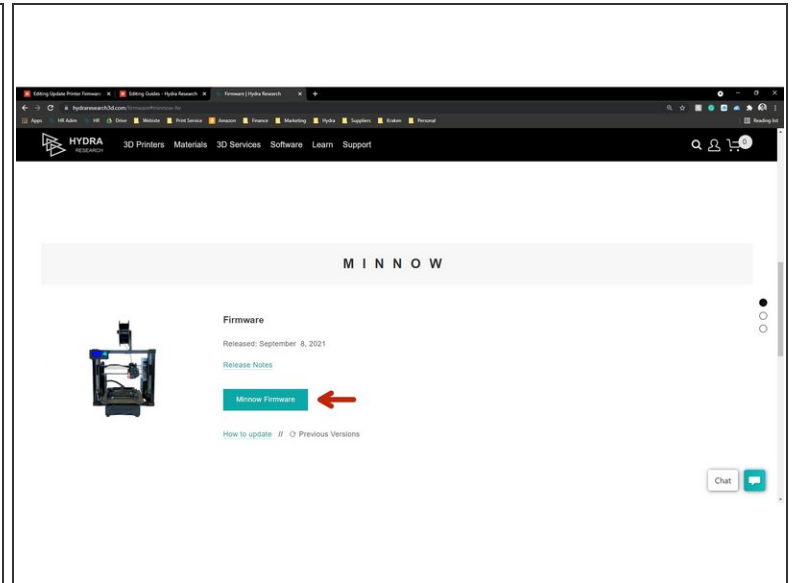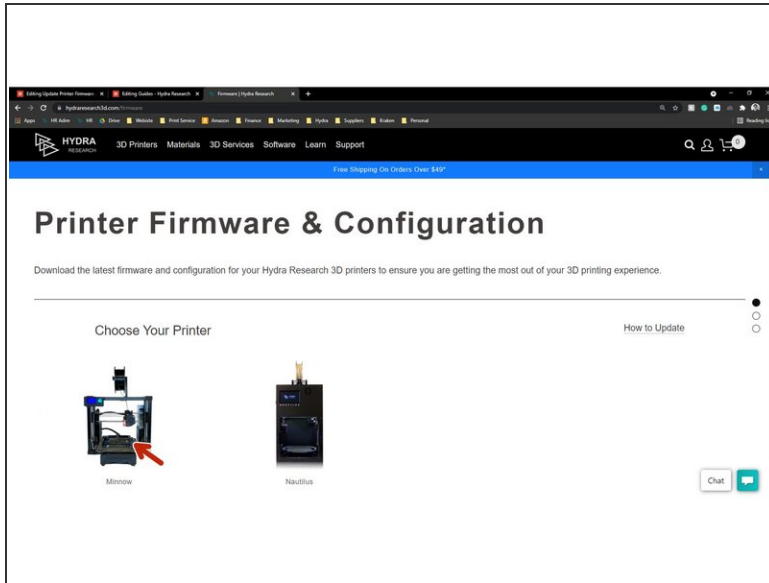

- [Download the latest printer firmware](#) from the Firmware page on the Hydra Research Website
- Chose your printer model and download the appropriate Firmware.


⚠ Do not unzip the file you have just downloaded.

Step 2 — Upload to Printer

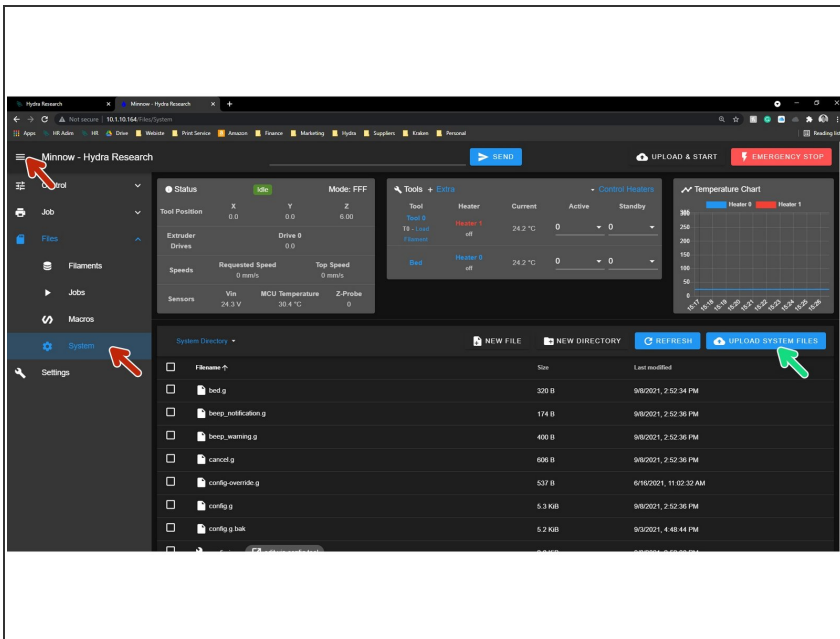

- Open Duet Web Control (DWC) by typing your printer's IP address into the search bar of your web browser.
- ❗ You can find your printer's IP address in the menu system on the printer's display.
- Once connected to your printer, navigate to the File Management section located in your left sidebar and select **System**.
- On the right side click the Upload System Files button and choose the Firmware zip file you download.

Step 3 — Install

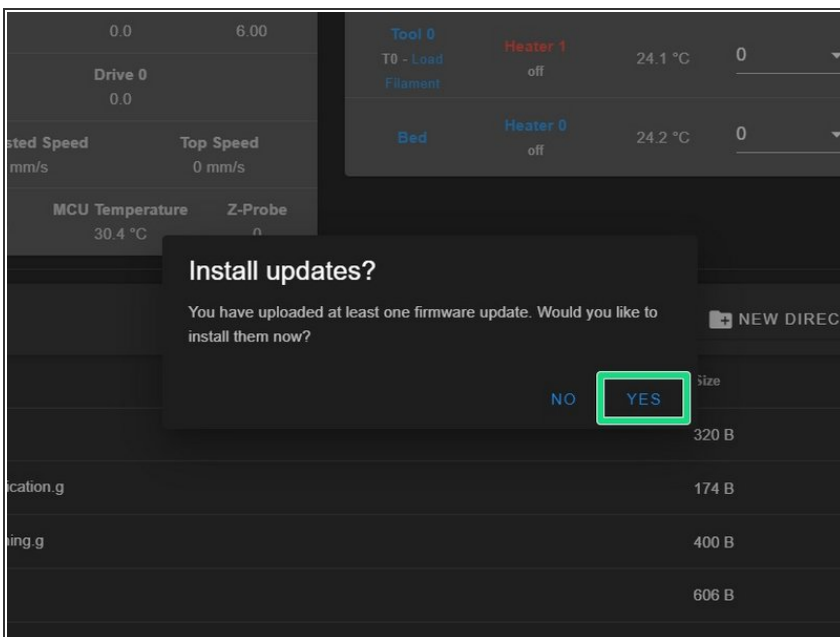

- After all the files are uploaded, you will be prompted to install the updates.
- Click "Yes" and your printer will restart and install all the updates.
- The firmware update is now complete!

